




RasPiO® - CYNTECH Breakout Pro Protected GPIO Breakout Board

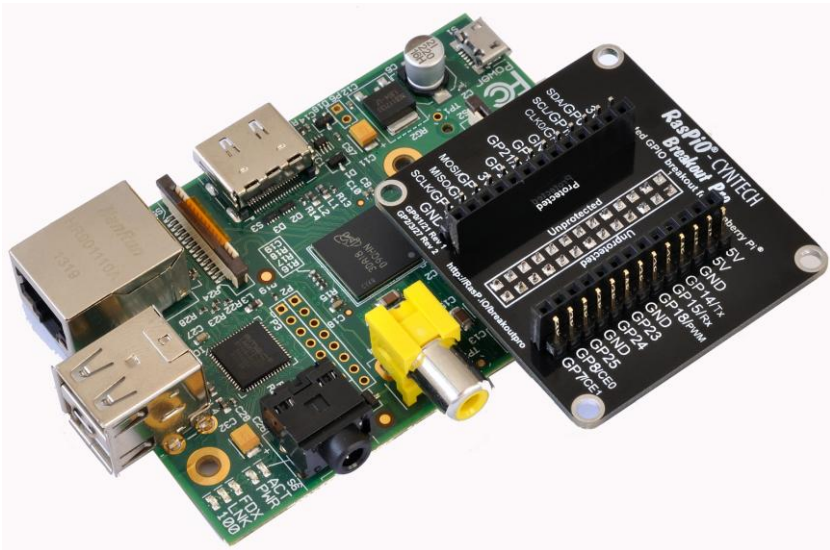

Solder the main 26-way female header underneath first, then the inner (female) and outer (male) headers on top, according to your preference. Ensure the board is attached to the Raspberry Pi® as shown above. (Raspberry Pi® not included)

RasPiO® - CYNTECH Breakout Pro Assembly Details, information and examples –

<http://RasP.iO/breakoutpro>



Made in China - RasPiOBreakoutPro-01